

FAMILIARIZE

Read through the complete set of instructions before you begin assembly.

CHECK ALL PARTS

Compare the parts list to the parts included in your package.

ASSISTANCE

Help may be required to handle the packaging and assembly of the ATV. Start the assembly with another person.

SAFETY

Be careful in handling the metal crate packaging.

All information contained within this publication is based on the latest product information at the time of publication. Due to constant improvements in the design and quality of production components, some minor discrepancies may result between the actual vehicle and the information presented in the assembly instructions. We reserve the right to make product changes at any time, without notice and without incurring any obligation to make the same or similar changes to the vehicle previously built or sold.

Depictions and/or procedures in this publication are intended for reference use only.

Katerra Motorsports is not liable for any incidental, consequential, or contiguous damages arising from the use of this products.

1. Remove the Packaging



Remove Carton and vinyl wrap from metal crate.



Remove the fastener tied to loose parts from the metal frame.



Remove all loose components from the metal crate.



Accessories from carton box: 1x rear view mirror; 1x tool bag; 4x dirt-proof cap; 2x handlebar securing blocks; 3x bags of bolts, nuts and fasteners



Two tires, front bumper and carry bar will be attached to main crate



Remove the two bolts from the metal crate attached to the handle bar clamp using a 10mm wrench.

1. Remove the Packaging (cont'd)



Remove the frame from the base of the crate by removing the 10mm bolts.



Lift off the frame of the crate leaving the ATV on the base.

2. Installing the Handle Bar



Place the speedometer bracket on steering stem and align holes. Then place the bottom steering block over the speedometer bracket



Place Handle bar on the clamp base. The handlebar should be centered using the embossing for reference.



Place clamps over handlebar and attach by screwing the bolts through the clamp to the base using the 10mm wrench. Tighten all 4 bolts to the recommended 25 N.m.

3. Installing the Front Bumper Grille



Loosen the bolts for the front bumper using 12mm wrench.



Place Grille in position and hand tighten four bolts to hold the bumper in position.



Tighten all four bolts using 12mm wrench.



4. Installing the Rear Wheels



Remove the clamps that hold the rear axle to the metal crate using the 8mm wrench.



Install the screws and tighten them with wrench (12mm×14mm). (Torque rating: 35-45 Nm)



Slide the cotter pin through one of the holes through the holes on the axle. Bend the end of the cotter pin to secure the pin in place.



Tighten the safety nuts on the inside of the wheel. (Torque rating: 25-30 Nm)



Install dirt-proof caps on hub ends.


5. Installing the rear Carry Bar



Loosen the bolts on the frame for the carry bar.



Put the carry bar on and tighten the bolts using wrench (12mm × 14mm).

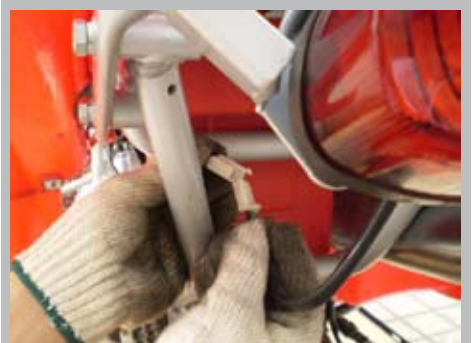

Connect tail lamp cable.

6. Installing the Rearview Mirror



Rear-view mirror is installed on left handle bar. Set mirror stem into the base and screw in place by turning clockwise.



Adjust mirror.

7. Cable Straps



Fasten the cables with fastener. (left)



Fasten the cables with fastener. (Right)

8. Connecting the Battery




Remove the seat by pulling the seat lock towards the back of the ATV.



Remove the seat.



Connect the battery. Green cable plugs to negative terminal.

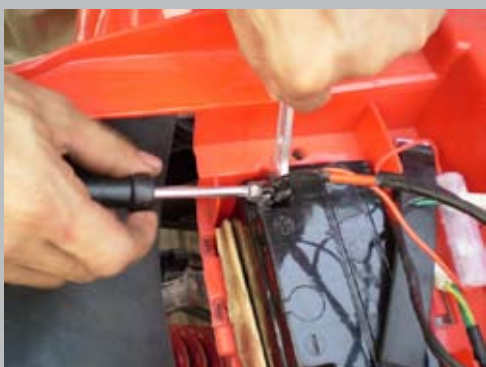

Red cable plugs to positive terminal. Then tighten the screw using a Philips screwdriver.



Connect the cable.



Fix the battery and cables with the provided rubber strap.



Re-install the seat. Assembly is complete.